


SHEER WAVEFOLD

Standard Wave Fold Curtain Tracks – Fitting Instructions

If installing on plaster or wallboard, where possible, pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets in securely in place.


Installing the Track to the Brackets

Mark positions where the track will extend to. Install first bracket within 50mm from the end of the track. Attach support brackets in evenly spaced out intervals. The maximum distance between brackets should not exceed 500mm. The top edge of the support brackets, at the point that they touch the wall, should be the same height as the top edge of the end brackets at the point that they touch the wall.

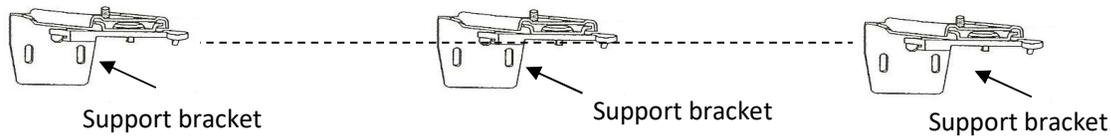

Clip the track into the support brackets.

Count out the number of hooks in your curtain and make sure your track has the correct number of carriers. They will match for Hand draw & free draw operation. For cord drawn operation there will be 2 less carriers than hooks as the last 2 hooks on the curtain will attach to the holes in the cord drawn mechanism.

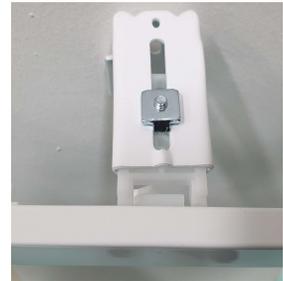

Attach curtains to the tracks

Cord Drawn Track

Attach the first hook of the curtain onto the master carrier. Attach your next hook to the next carrier and repeat. Attach your final 2 hooks into the holes in the cord drawn mechanism.

Hand Draw/Free Draw Track

Attach the first hook of the curtain onto the master carrier. Attach your next hook to the next carrier and repeat

How to install the Cord Tension device

The Tension Device reduces the chance of strangulation by limiting access to the control cord. When fitted properly it should hold any looped controls firmly tensioned against an architrave or window frame. This should make it hard for a young child to fit through the controls.

Clip the cord through the bottom of the Tension Device. Position the Tension Device on the window frame or architrave in a position that will not compromise the operation of the control cord / chain. Make sure the controls are not twisted when the Tension Device is in the mounting position. Ensure that there is SUFFICIENT TENSION on the cord – however excessive tension will impair smooth operation of the blind. Hold the Tension Device in the correct position, as shown. Insert and secure the screw through hole. Make sure the screw is affixed into the architrave or window frame (solid material like MDF or Hardwood).

⚠ WARNING

WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from windows covering cords or chains. Do not remove this label.

