

# Fitting Instructions for Rope & Pulley Outdoor Blinds

1. For face fix - Attach the timber to fascia board with screws or bolts or underneath ceiling beam.
2. For ceiling/top fix – Attach breeching staples to bottom rail if strap adopters are not required, otherwise use strap adapters.
3. Slide the strap adopter in to the bottom rail end caps and secure with screws.
4. Fix breeching staples to the floor directly under the strap adapter. If there are no fixing points, you can fix the breeching staples to the posts.
5. Use the straps to secure the strap adapters to the breeching staples when the blind is down.
6. Fix rope cleat to veranda post to the required height.
7. Make sure the cleat is out of reach of small children. All excess cord should be wrapped around cleat hook.


## How to install the Cord Cleat

The Cord Cleat is used to tie excess cords out of the reach of children. To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220 mm or longer at a height of less than 1600 mm above floor level – to prevent a child from unwinding a cord from a cleat.

1. Position the Cleat against the window frame in a place that is accessible to the user while remaining inaccessible to small children.
2. Use a drill to fasten the Cleat with the two screws provided.

This device will not prevent strangulation if young children wrap pull cords around their necks.

The Cord Cleats  
attach vertically

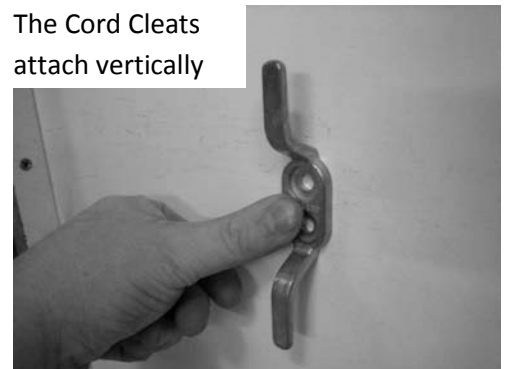

### WARNING

**WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove this label**

