


OUTDOOR BLINDS

STRAP DOWN SPRING ROLLER – Fitting Instructions


Fitting the brackets:

Measure the opening and fit the universal brackets as shown at both ends.

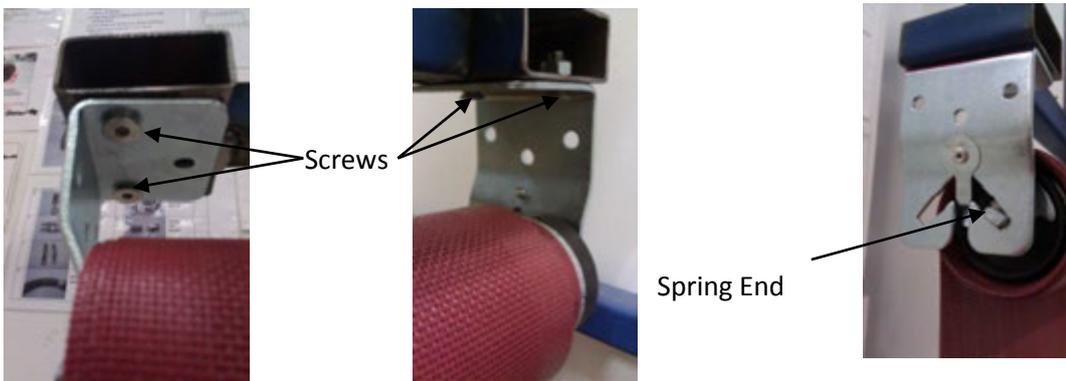

Fitting Head Box:

For Face Fit - Mark and drill your hole. Insert the wall plug and screw leaving about 15mm of the screw sticking out to hang the Hood box on.

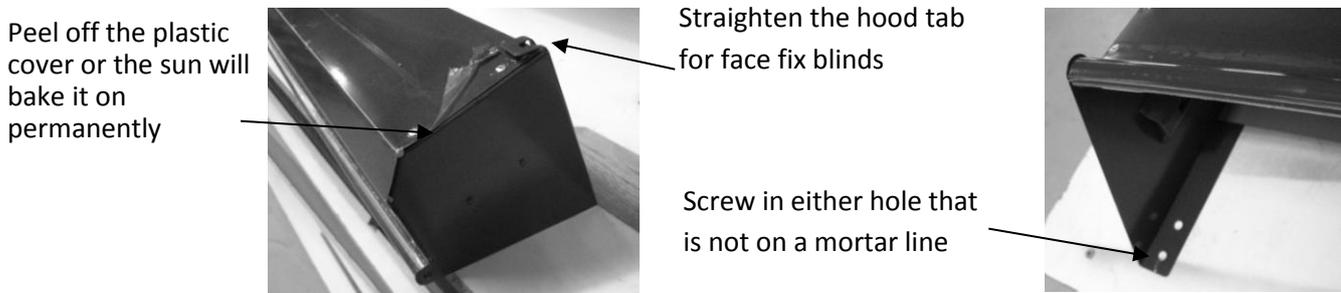


Hang the left tab of the hood box over the screw. Lift the right side of the Hood Box so it is level with the top edge of the window. Mark where the right hand screw will go. Take the Hood Box off the window. Insert your right hand screw, again leaving about 15mm out for the Hood Box to hook onto.

Hang the Hood Box on the screws. Fasten the screws tighter. Drill and secure the bottom of the Hood Box each side through either of the lower inside holes that are not on a mortar line.

For Recess Fit – Screw the head box directly through to the top beam directly.

Tensioning the Spring:

Unlock the holding tab by moving it upward. This enables the spring to be tensioned.

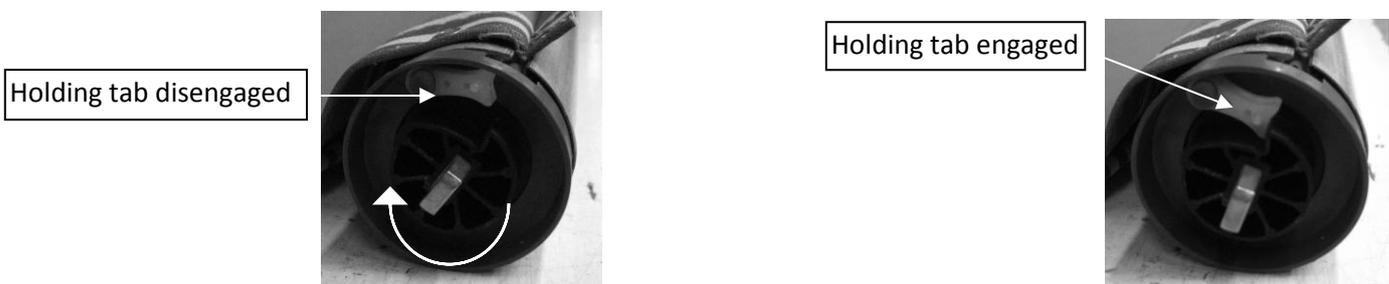


Attach a shifter to the Roller Pin. Wind the shifter clockwise to apply tension. Use the size chart to determine how many turns of tension are required. Do NOT let go of the shifter while tensioning as the spring has a lot of force in it. Do NOT try and over tension the spring. When the right amount of tension has been applied, drop the holding tab down and wind the spring back until it engages the pin.

Attach the Cloth to the Brackets or Hood Box

Take the plastic cover off the Cloth. Insert the round pin side first. Make sure the pin goes in the hole, not sitting on top of the groove. Then lower the spade end (the spring side) into the bracket slot (make sure the tab is at the bottom).



Make sure the circle pin end goes in the hole. It's too big to drop through the gap.

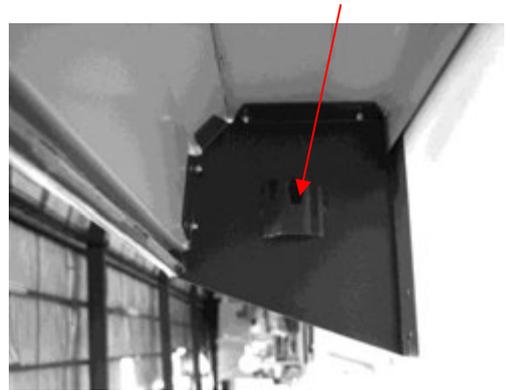

Attaching Straps:

Remove the screw from the bottom rail as shown and attach the strap adaptor (bend the adaptor 90 degrees).

Fasten the breeching staples to the ground so that when the awning is fully at the down position, they are exactly below the strap adaptors. Then fasten strap adaptor and the breeching staples with the straps provided.



When the blind is pulled down it should be even tightness on both sides of the cloth. If one side is tight and the other side is loose the awning is not sitting level.