


Fitting Instructions for Decorator

If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.


Install Brackets

If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets. The end brackets should be placed as close to the end of the rod as possible. Support brackets should be evenly spaced between the end brackets.

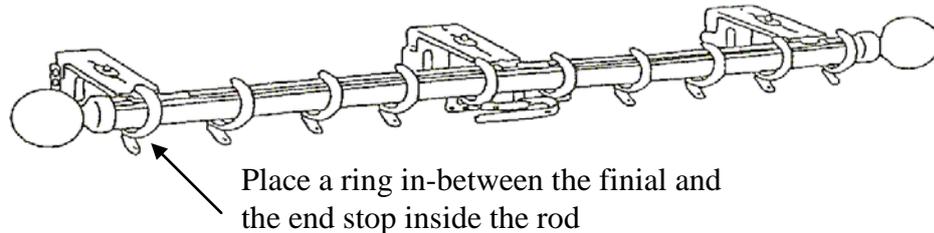

Fitting the Rod to the brackets

Turn the cam arms to point towards the wall. Hold the rod under the bracket so that the lug of the cam arm is inside the top channel of the rod. Pull the cam arm towards the front of the blind until it locks in place running parallel to the length of the rod. For centre close blinds place a hook link on the outer side of each end bracket. For a one-way draw place the hook link on the side the curtain will bunch to.

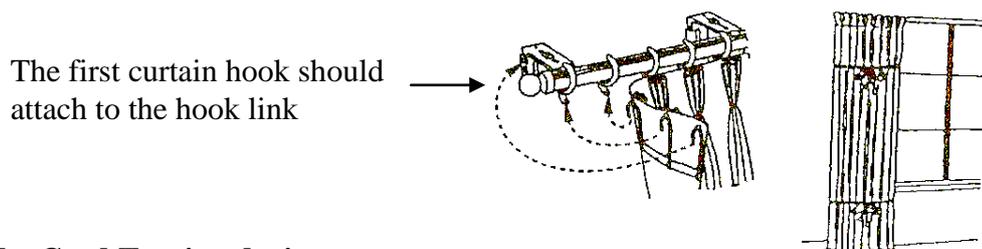


How to install the Cord Tension device

The Tension Device reduces the chance of strangulation by limiting access to the control cord or chain. When fitted properly it should hold any looped controls firmly against a wall or window frame. This should make it hard for a young child to fit through the controls.

Clip the cord / chain through the bottom of the Tension Device. Position the Tension Device on the window frame or wall in a position that will not compromise the operation of the control cord / chain. Make sure the controls are not twisted when the Tension Device is in the mounting position. Do NOT stretch or pull down on the cord / chain to provide extra tension. Doing so will cause excessive wear.

Hold the Tension Device in the correct position, as shown. Insert and secure the screw through hole. Make sure the screw is affixed into a solid surface.

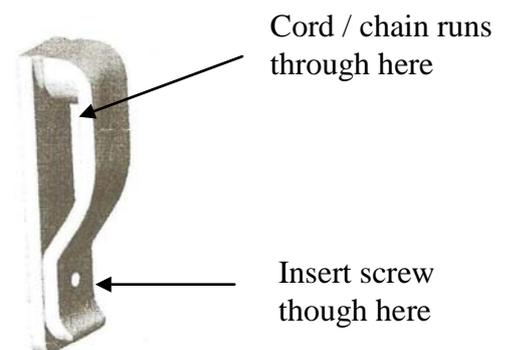

⚠ WARNING

Young children can STRANGLE in cord bead chain loops. They can also wrap cords around their necks and STRANGLE.

Always keep cords and bead chains out of children's reach.

Move cots, play pens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.

