


Fitting Instructions for Standard Curtain Track



If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.

Installing the Track to the Brackets

Mark positions where the track will extend to. Attach the return end brackets to these points with screws. Attach support brackets evenly spaced in-between the end brackets. The maximum distance between brackets should not exceed 1 metre. The top edge of the support brackets at the point that they touch the wall should be the same height as the top edge of the end brackets at the point that they touch the wall.

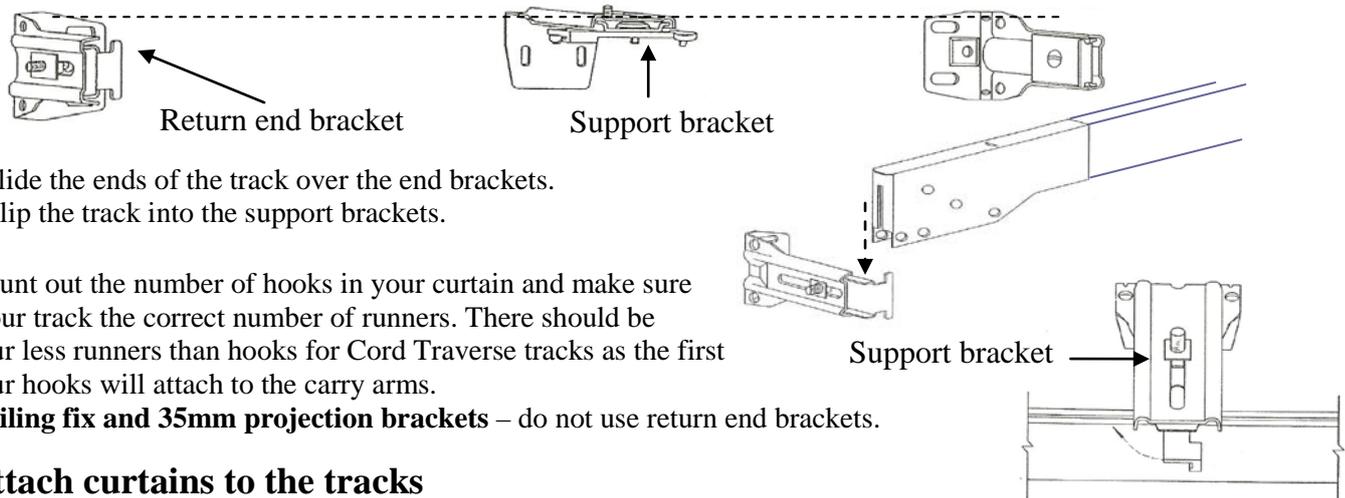

Slide the ends of the track over the end brackets.
Clip the track into the support brackets.

Count out the number of hooks in your curtain and make sure your track the correct number of runners. There should be four less runners than hooks for Cord Traverse tracks as the first four hooks will attach to the carry arms.

Ceiling fix and 35mm projection brackets – do not use return end brackets.

Attach curtains to the tracks

Cord Traverse Track

Attach the first four hooks of the curtain to the master carrier. Attach your next hook to the runner closest to the carrier and continue on to the edge of the track. Repeat the process for the second side if the blind is centre close.

Hand Traverse Track


Attach your first hook to the outside most runner and work your way in.

How to install the Cord Tension device

The Tension Device reduces the chance of strangulation by limiting access to the control cord or chain. When fitted properly it should hold any looped controls firmly against a wall or window frame. This should make it hard for a young child to fit through the controls.

Clip the cord / chain through the bottom of the Tension Device
Position the Tension Device on the window frame or wall in a position that will not compromise the operation of the control cord / chain. Make sure the controls are not twisted when the Tension Device is in the mounting position. Do NOT stretch or pull down on the cord / chain to provide extra tension. Doing so will cause excessive wear.

Hold the Tension Device in the correct position, as shown. Insert and secure the screw through hole. Make sure the screw is affixed into a solid surface.

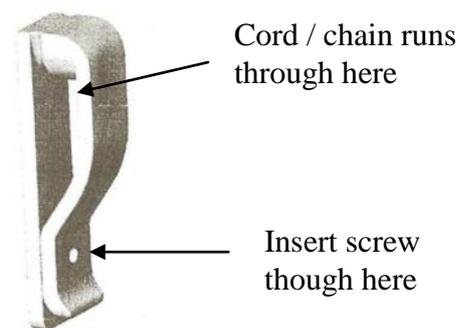

⚠ WARNING

Young children can STRANGLE in cord bead chain loops. They can also wrap cords around their necks and STRANGLE.

Always keep cords and bead chains out of children's reach.

Move cots, play pens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.

