


Fitting Instructions for Crank Operated Strap Downs

Fitting the Hood Box


Measure the width of the Hood Box then measure the width of the window. The difference between the two is the total amount of over hang your box will have. Divide this number by two to determine how much over hang you will have on each side. Eg. If the Hood Box measures 2150 and the window measures 2000, the total over hang will be 150mm. Dividing by two equals 75mm each side of the window. The attachment point for the screw will be 15mm less than the over hang, i.e. 60mm.

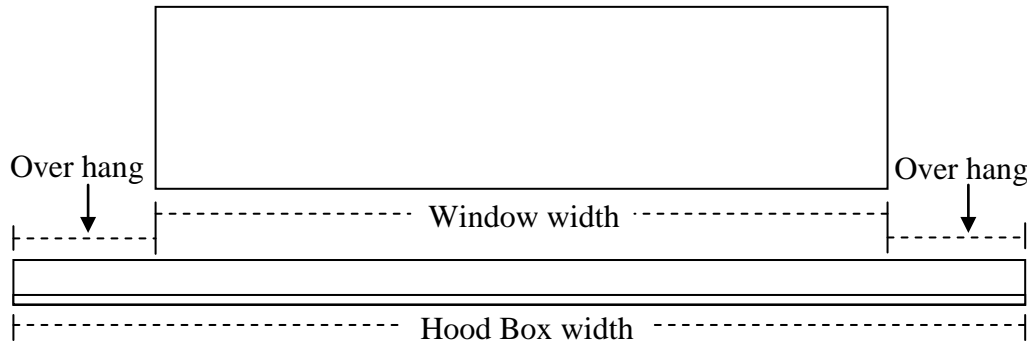

The left hand screw for the Hood Box should be placed to the left of the top corner of the window at the attachment point of the over hang and 180mm higher (the height of the Hood Box). If installing on a brick wall NEVER put the screw into a mortar line. If the position you need to drill is over a mortar line move up to the bottom of the brick above that position.


Mark and drill your hole. Insert the wall plug and screw leaving about 15mm of the screw sticking out to hang the Hood box on.

Peel off the plastic cover or the sun will bake it on permanently

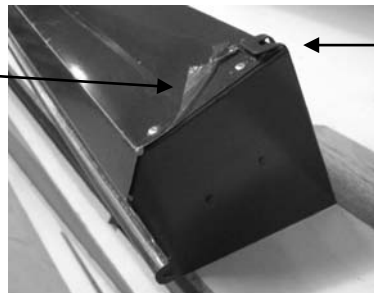

Straighten the hood tab for face fix blinds

Screw in either hole that is not on a mortar line

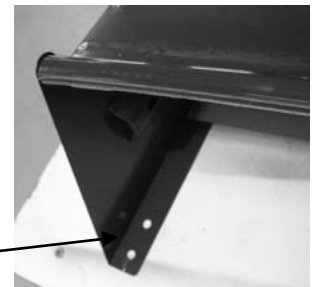

Hang the left tab of the hood box over the screw. Lift the right side of the Hood Box so it is level with the top edge of the window. Mark where the right hand screw will go. Take the Hood Box off the window. Insert your right hand screw, again leaving about 15mm out for the Hood Box to hook onto.

Hang the Hood Box on the screws. Fasten the screws tighter. Drill and secure the bottom of the Hood Box each side through either of the lower inside holes that are not on a mortar line.

Attach the Cloth to the Hood Box

Take the plastic cover off the Cloth. Insert the square pin into the crank mechanism first. Drop the other side into the opposite end slot second.

Wind the blind down to waist height using the crank handle. Press the bottom flap of the blind down along the length of the bottom rail. This will flatten down further over time as the blind experiences some weathering.

Take the grub screws out of the ends of the bottom rail and attach the strap adapters to the bottom rail using the grub screws. Lower the blind to the desired drop. Fix the breeching staples just outside the width of the blind and slightly lower than the height of the bottom rail.

Use the straps to secure the strap adapters to the breeching staples when the blind is in the lowered position. Wind the blind back up gently to give the cloth some tension. If you want to have the blind secured at a partially open height, order extra breeching staples and attach them at the desired height.