


MULTI-STOP AWNING

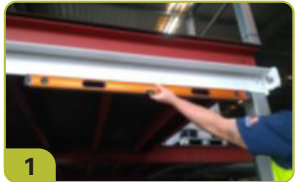

Fitting Instructions

1. Place back hooding in the required position. Using a spirit level ensure the back hooding is level. Drill pilot holes into the structure where the brackets will be positioned
2. Screw brackets to structure. Check brackets/Cassette is level once installed
3. Pretension the spring (turn clockwise) to the desired tension while the spring is in the tube (please refer to the Spring tension Chart). Secure "Locking Pin" in place while under tension ready for install.



4. Place awning tube with fabric & bottom rail in to the mounting brackets idle end pin first. Then drop the spring end flange in to the other end mounting bracket.
5. Secure Cassette by riveting pre-drilled holes through Cassette Front & bracket tabs.
6. Position Multi-stop channel with bracket tab. Check placement with level.
7. With multi-stop side channels in its level position, drill pilot holes, then secure with screws



8. Insert bottom rail in to side channels. At an angle, slot end caps in to the channel.



9. Pull bottom rail down to ensure awning is running up & down smoothly. Rotate bottom rail to clip/lock in to position.

