



SPRING ROLLER BLINDS - Fitting Instructions

If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.

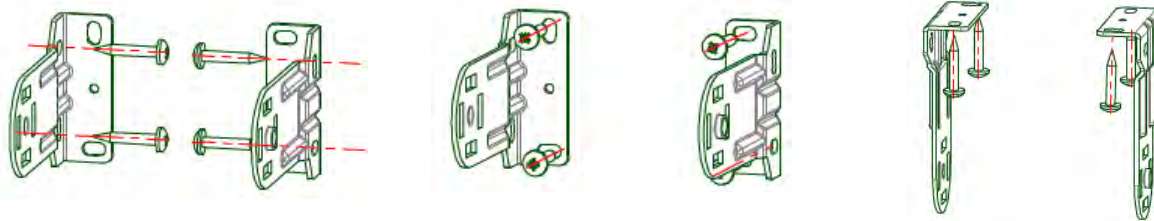

1) Install Blind

- Mount the brackets** – Brackets are universal. For underroll/standard roll, spring is always on the left side. For overroll, spring is always on the right side. (Note – The brackets should be installed with the slotted screw holes nearest to the window. The edge of the brackets that are nearest to the window should be a half a roll diameter less 15mm from the back of the recess.) Mark through the elongated screw holes of the bracket and drill using a 2.5mm drill for the timber fixing, or an appropriate size masonry drill if plug fixing. Screws must be at least 25mm from the edge of masonry to avoid splitting. Secure the brackets into position – each one with one screw only, through the slotted holes to allow for adjustments. When satisfied with the position, drill through the round holes and secure with additional screws
- Pin end first** – Put the Idler Pin End in to the centre hole of the bracket.
- Spring end next** – Keeping gentle pressure against the Pin end, lift the spring end and align the two hooks on the spring with the two slots in the bracket. The hooks should fall into place in the bracket.
- To remove blind** – lift hooks of the Spring and gently push towards the pin end, clearing the hook from the bracket.
- Note: the pin end needs to compress by 5mm in order to clear the spring hooks. Therefore it is prudent to ensure there is 6mm of clearance in the idler spring pin end.**

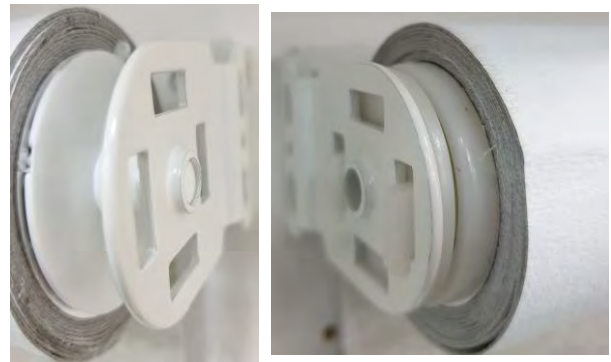

2) Adjusting the spring tension

The blinds are pre-tensioned when supplied. If spring tension needs adjustment,

- ☞ **Increasing the spring tension:** Pull the blind a third way down. Remove the blind from the brackets. Roll the fabric up manually. Secure the blind back in to the brackets. Test the tension. Continue this step until you reach the required tension.



- ☞ **Decreasing the spring tension:** Ensure the blind is rolled all the way up. Remove the blind from the brackets. Roll the fabric up manually. Secure the blind back in to the brackets. Test the tension. Continue this step until you reach the required tension.

