



# Fitting Instructions for Fixed Guide Awnings

## Fitting the Hood Box

Drill your 6mm holes in the ends of the Hood Box where you will attach the Guide Poles. This should be half way between the bottom edge of the roller holder and the back edge of the Box ends.

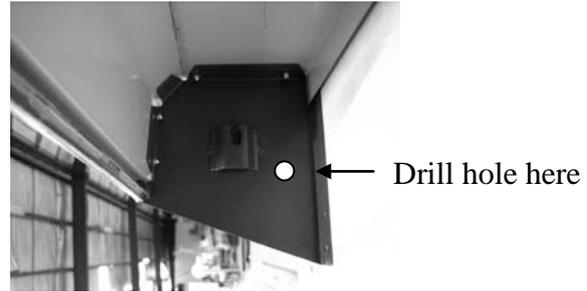


Measure the width of the Hood Box then measure the width of the window. The difference between the two is the total amount of over hang your box will have. Divide this number by two to determine how much over hang you will have on each side. Eg. If the Hood Box measures 2150 and the window measures 2000, the total over hang will be 150mm. Dividing by two equals 75mm each side of the window. The attachment point for the screw will be 15mm less than the over hang, i.e. 60mm.

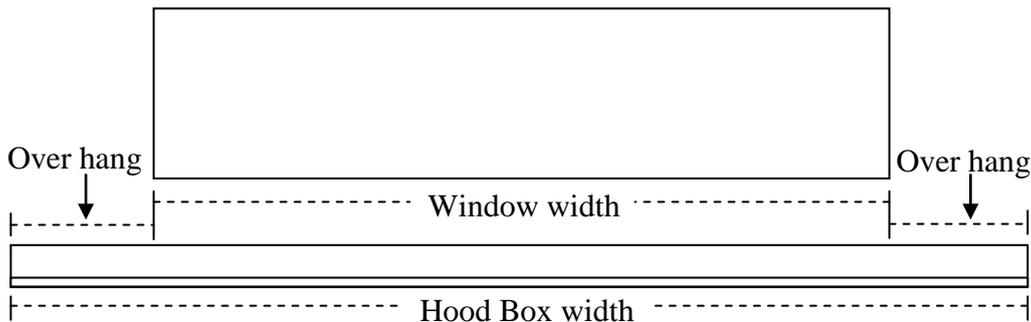


The left hand screw for the Hood Box should be placed to the left of the top corner of the window at the attachment point of the over hang and 180mm higher (the height of the Hood Box). If installing on a brick wall NEVER put the screw into a mortar line. If the position you need to drill is over a mortar line move up to the bottom of the brick above that position.

Mark and drill your hole. Insert the wall plug and screw leaving about 15mm of the screw sticking out to hang the Hood box on.

Peel off the plastic cover or the sun will bake it on permanently

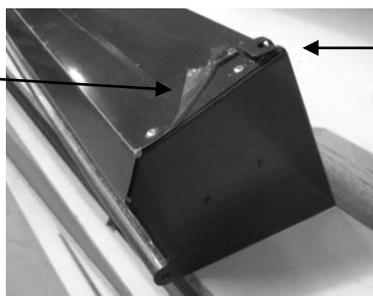

Straighten the hood tab for face fix blinds

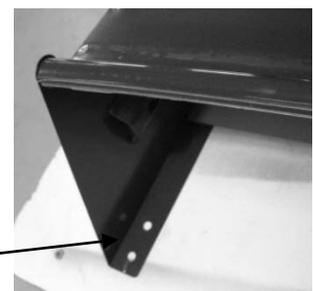


Screw in either hole that is not on a mortar line

Hang the left tab of the hood box over the screw. Lift the right side of the Hood Box so it is level with the top edge of the window. Mark where the right hand screw will go. Take the Hood Box off the window. Insert your right hand screw, again leaving about 15mm out for the Hood Box to hook onto. Hang the Hood Box on the screws. Fasten the screws tighter. Drill and secure the bottom of the Hood Box each side through either of the lower inside holes that are not on a mortar line.

## Tension the Roller Pin

Attach a shifter to the Roller Pin. Wind the shifter clockwise to apply tension. Use the size chart to determine how many turns of tension are required. Do NOT let go of the shifter while tensioning as the spring has a lot of force in it. Do NOT try and over tension the spring. When the right amount of tension has been applied, drop the holding tab down and wind the spring back until it engages the pin.

## Fitting Instructions for Fixed Guide Awnings

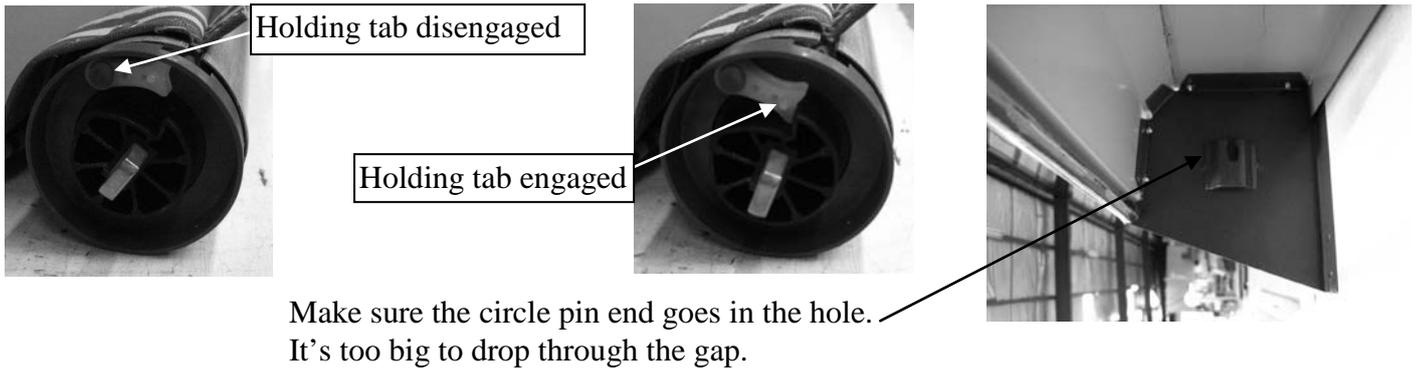

### Attach the Cloth to the Hood Box & Guides


Take the plastic cover off the Cloth. Insert the round pin side first. Make sure the pin goes in the hole, not sitting on top of the groove. Drop the spring side into the slot second.

### Fitting the Guides

Feed the Guide Poll through the bottom rail Guide Sleeve. Bolt the top of the Guide Polls to the inside of the Hood Box at the holes drilled earlier. Make sure the bolts are fastened tightly.

Slide the L-Bracket onto the Guide Poll. Attach the L Bracket to the wall so that the bottom of the L-Bracket is level with the windowsill. Make sure the Guide Poll is running parallel to the window.

Pull the blind all the way down. Hold the Centre Pulley against the wall, under the windowsill, directly under rope. While holding the Centre Pulley in this position let the blind back up. Mark your holes and attach the Centre Pulley to the wall. Run the rope through the pulley from the outside in.

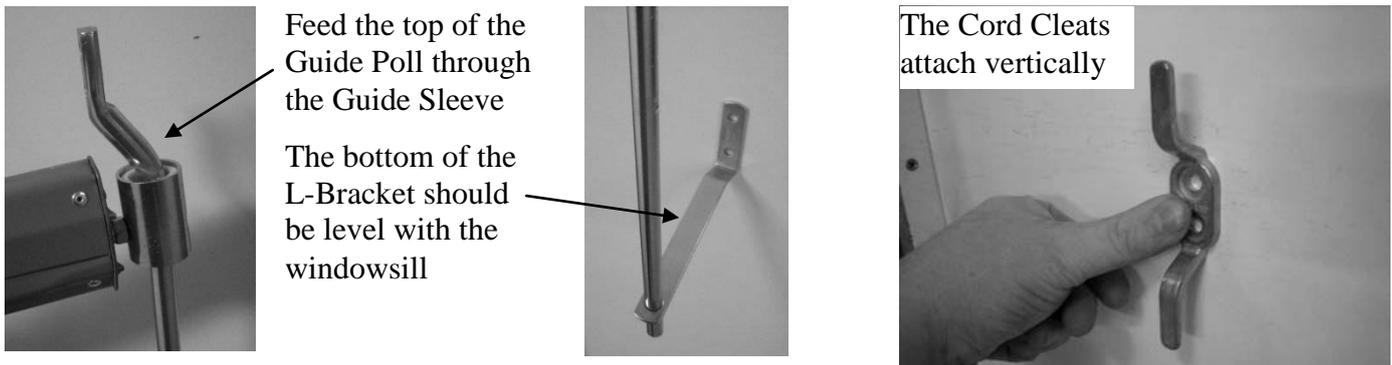

### Attach the Cord Cleats

The Cord Cleat is used to tie excess cords out of the reach of children. To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220 mm or longer at a height of less than 1600 mm above floor level – to prevent a child from unwinding a cord from a cleat.

1. Position the Cleat against the window frame in a place that is accessible to the user while remaining inaccessible to small children.
2. Use a drill to fasten the Cleat with the two screws provided.

This device will not prevent strangulation if young children wrap pull cords around their necks.

#### ⚠ WARNING

**WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove this label**

